

Touch Screen



1. The Power button.
2. The Home screen.
3. The NFC Indicator.
4. The 7" capacitive Touch Screen.
5. Status LED provides a visual status of the device. It flashes blue if:
 - A user has swiped a card for authentication
 - The device is Powering On
 - A print job, copy job, or receive-fax job has completed
 It flashes amber if:
 - The device has an error or an alert that requires user attention.

copy | print | scan | fax | email




COPY

Select one of the following methods:

- Load the original face up in the document handler
- Lift the document feeder or document glass cover and place the original facedown on the back, left corner of the document glass.
- On the Home screen,
- Touch the **Copy** icon.
- Enter the desired number of copies using the soft keypad,
- Specify feature settings on the main menu.
- Touch **Start**.


FAX

Select one of the following methods:

- Load the original face up in the document handler
- Lift the document feeder or document glass cover and place the original facedown on the back, left corner of the document glass.
- On the Home screen,
- Touch the **Fax** icon,
- In the **Enter the Fax Number** box, enter a recipient's fax number manually or
- To add a **Fax number** from the Address Book, touch 
- Specify feature settings on the main menu
- Touch **Send**.

SCAN TO EMAIL

Select one of the following methods:

- Load the original face up in the document handler
- Lift the document feeder or document glass cover and place the original facedown on the back, left corner of the document glass
- On the Home screen,
- Touch the **Email** icon,
- In the **To:** box, enter a recipient's email address manually or
- To add an **Email address** from the Address Book, touch 
- Specify feature settings on the main menu.
- Touch **Send**.

SECURE PRINT

At Your PC:

- In your application, click **File**, then click **Print**. In the Printer window, click Properties.
- Click the Job Type Down Arrow
- Click **Secure Print** from the drop down menu
- In the pop-up Window enter your **passcode** for this job.
- Re-enter to confirm and click **OK**.
- Click **OK** again.
- Click **Print**.
- Walk to the printer.

At the Printer:

- Touch the **Jobs** icon on the Home screen.
- Touch **Personal & Secure Jobs** button.
- Touch the folder that holds your print jobs
- Enter the Secure Print Passcode and select **OK**.
- Touch **Print All or Delete All**.
- Your document(s) will now print.