



The Touch Screen

1. The Power button.
2. The Home screen.
3. The NFC Indicator.
4. The 10" capacitive Touch Screen.
5. Status LED provides a visual status of the device.

It flashes blue if:

- The device is Powering On
- A print job, copy job, or receive-fax job has completed

It flashes amber if:

- The device has an error or an alert that requires user attention.



COPY

- Load the originals face up in the Document Handler or
- Lift the Document Feeder and place the original facedown on the back, left corner of the Document Glass.
- On the Home screen,
- Touch the **Copy** icon.
- Enter the desired number of copies using the soft keypad,
- Specify feature settings on the main menu.
- Touch **Start**

FAX

- Load the originals face up in the Document Handler or
- Lift the Document Feeder and place the original facedown on the back, left corner of the Document Glass.
- On the Home screen
- Touch the **Fax** icon, and select from one of the listed methods:
- Select **Manual Entry**, and enter the Recipient's fax number manually, then touch **Add**, or
- Select **Device Address Book**, and select 1 or more recipient(s), Touch **OK**
- Specify feature settings on the main menu,
- Touch **Send**.

SCAN TO E-MAIL

- Load the originals face up in the Document Handler or
- Lift the Document Feeder and place the original facedown on the back, left corner of the Document Glass.
- On the Home screen,
- Select Email Icon
- Select one of the email methods:
- Select **Device Address Book**, and select 1 or more recipient(s), Touch **OK**, or
- Select **Manual Entry**, and type the email address, then touch **Add**,
- Specify feature settings on the main menu
- Touch **Send**.

SECURE PRINT

At Your PC:

- In your application, click **File**, then click **Print**. In the Printer window, click **Properties**.
- Click the **Job Type Down Arrow**.
- Click **Secure Print Job**
- In the pop-up window enter your passcode for this job. Re-enter to confirm and click **OK**.
- Click **OK** again.
- Click **Print**
- Walk to the printer.

At the Printer:

- Touch the **Jobs** icon on the Home screen.
- Touch the **Secure Jobs** button.
- Touch the folder that holds your print jobs.
- Enter the Secure Print Passcode and select **OK**.
- Touch **Print All** or **Delete All**.
- Your document (s) will now print.